

Quick Start Guide

Wireless Dimmer



PACKAGE CONTENTS



Dimmer w/
Switch

Discovery
Tool


Installing Your Power Controller

The Wireless System Controller must be registered before discovering your Dimmer Switch.

EASY SET-UP

- 1** Plug in a lamp with dimmable lights (incandescent bulbs) into the Dimmer Switch.
- 2** Plug the Dimmer Switch into a wall outlet.
- 3** Register the Dimmer Switch with your Wireless System Controller using a process called discovery and using the discovery tool.

FEATURE LOCATOR

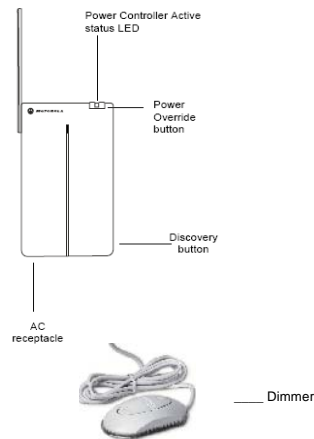


Using Your Dimmer Switch

Using your cell phone or computer and Wireless System Controller, you can remotely manage the Dimmer Switch by setting times to turn devices on and off.

How It Works?

The Dimmer Switch enables you to turn on and off devices remotely from your cell phone or computer. For example, you can have MyVirtual Network™ turn on a lamp at specified time and off again at another specified time.

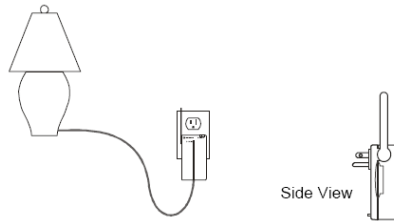

Troubleshooting

Problem

Wireless System Controller does not recognize the Dimmer Switch during discovery

Device does not turn on/off when specified

Solution

- Position the Dimmer Switch in closer proximity to your Controller and try again.
- Ensure that there are no other wireless devices interfering with the Dimmer Switch. The Dimmer Switch transmits on the 418 MHz frequency.
- Ensure that the Dimmer Switch has been registered properly with the Wireless System Controller by logging into your MyVirtual Network™ program and reviewing the Devices list.
- Place the Dimmer Switch in another location closer to the Wireless System Controller.
- Consider adding a Wireless Signal Repeater to your system to increase device signal communication range.

FAQ

How far away can the Dimmer Switch be placed from my Wireless System Controller?

Typically 60 feet (18 meters).

Can I place the Dimmer Switch in a different room than my Wireless System Controller?

Yes, the Dimmer Switch and Wireless System Controller use radio frequencies to communicate with each other. These frequencies can go through objects like walls, ceilings, and floors.

Can I use the Dimmer Switch outdoors?

No, the Dimmer Switch is restricted to indoor use only.

What can I plug into the Dimmer Switch?

You can plug in any lamps with dimmable lights (incandescent bulbs) into the Dimmer Switch.

Can my lamp automatically turn on when my camera's motion sensor is triggered?

Yes. This needs to be configured in the MyVirtual Network™ program under macros.

Features and Specifications

- Device signal communication
- LED indicates state of power
- Discover button

Typical Range:

60 feet (18 meters)

Operating temperature/humidity:

Not intended for outdoor use

Dimensions:

3.66"L × 2.20"W × 2.24"H (56mm × 93mm × 57mm)

Storage temperature:

-25° C to 75° C

Communication frequency:

418 MHz