


## Motion Detection Capability


The system has a very flexible motion detection capability that allows you to specify a window to define the detection area and adjust sensitivity.


To access this window feature, select the camera settings pop-up from the Device Overview page. On the settings page and click “Motion Detection Areas”

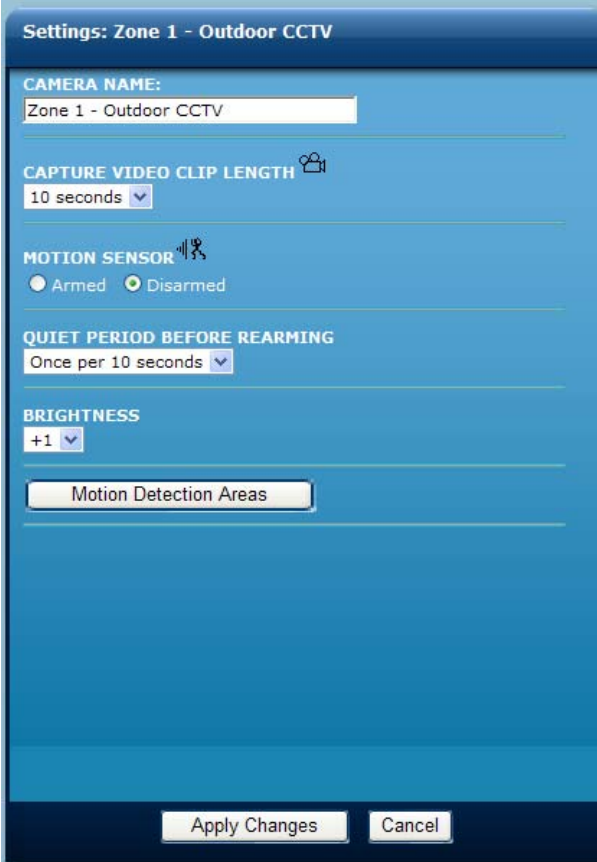

Settings: Zone 1 - Outdoor CCTV

CAMERA NAME:  
Zone 1 - Outdoor CCTV

CAPTURE VIDEO CLIP LENGTH   
10 seconds

MOTION SENSOR   
 Armed  Disarmed

QUIET PERIOD BEFORE REARMING  
Once per 10 seconds

BRIGHTNESS  
+1

Motion Detection Areas

Apply Changes Cancel


On the Motion Detection page, you can select up to four rectangular windows (red, green, yellow, & blue) for the motion detection area function using the grid that is superimposed on a snapshot.

This is done with two mouse clicks for each rectangle, one silent click in upper left corner of the rectangle and the second click in the opposite lower right corner of the area you would like to highlight. Motion will be detected only in the highlighted areas. Once you have finished selecting an area move the bullet down to the next color to begin the next area.

Please note that you can highlight areas in different color areas for the initial

motion detection areas. However, the highlighted areas will not be displayed until you move the bullet down to the color of the area covering the initial highlighted area.

When you enter this page, the system automatically moves the camera to the arm preset position for Pan and Tilt Digi-Cam.

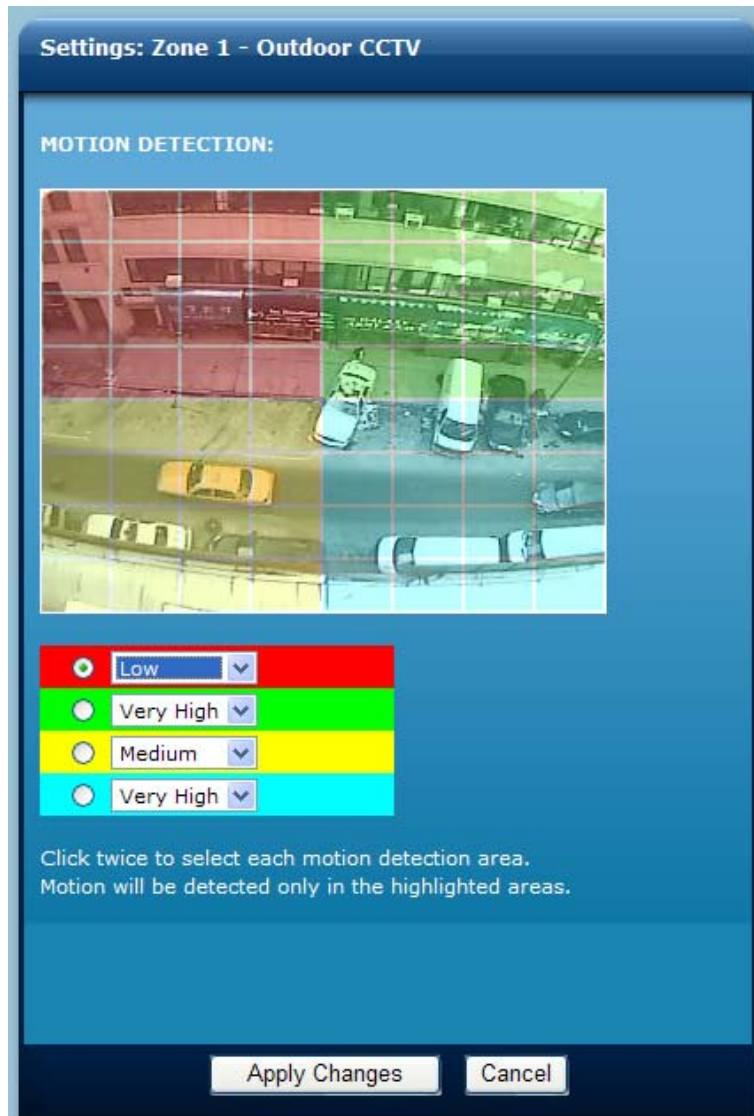

You can also set the motion detection sensitivity for each separate motion detection area by selecting one of the options in the Sensitivity pull-down Low to Very High. If you are getting false alarms, set the sensitivity lower. If motion is not being detected, make the setting higher. When you are done, click "**Apply Changes**"